

INSTALLATION INSTRUCTIONS

Architectural Modular Series

**SPACE PRO**

SIGNS | EXPO DISPLAYS | POP-UP SPACES

TAPE & SILICONE INSTALLATION




REAR VIEW -
Without assembly bars.
(Signs up to 126mm High)

Double sided tape

All surfaces must be clean, dry and free from dust, oil or any foreign matter.

Double sided foam tape only for:

- signs up to 210mm x 210mm approx.
- stable environment
- smooth surfaces

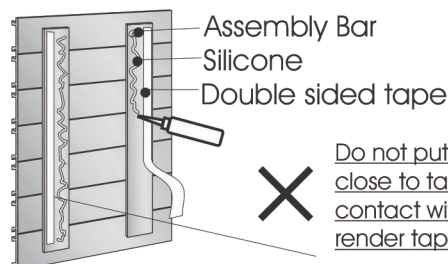


REAR VIEW - With Assembly Bars.
(Signs from 147mm & up in height)

D/S foam tape & silicone for:

- signs up to 630mm x 630mm approx.
- smooth surface

SCREW FIX INSTALLATION

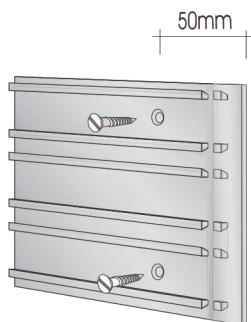

FRONT VIEW

Screw fixing is recommended for:
Signs above 630mm x 630mm.

Drill counter sunk holes 50mm in from the edge of the Base Plate, central in the track
The screw head must not protrude beyond the tracks.





Pan Head



Counter Sunk



Dome Head

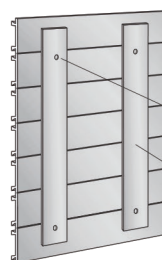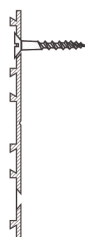


REAR VIEW

Counter Sunk Holes

Assembly Bar

Signs provided with assembly bars must be fixed at this point. Do not fasten signs in between assembly bars unless appropriate spacers are used.

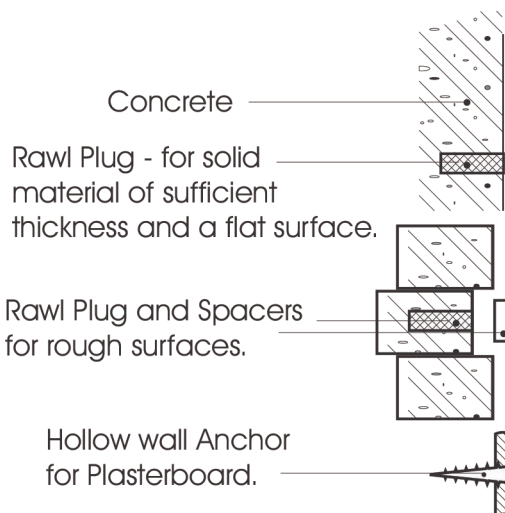

Concrete

Rawl Plug - for solid material of sufficient thickness and a flat surface.

Rawl Plug and Spacers for rough surfaces.

Hollow wall Anchor for Plasterboard.



S2K Identity Systems will not be held responsible for incorrect installation. All installations must be assessed on their own merit by the installer.